

## HOW TO ASSEMBLE LIDS

### Migratory Lid

1. Paint the joint areas of the lid rim with undercoat and allow to dry. Paint the joints again and nail together while wet. Undercoat the whole lid rim. Finish with 2 coats of top coat. Nail the vent grids over the inside of the hole. Continue with step 2.



< Lid rims




<Masonite

2. Paint these same places again, and with 50 x 2.5 (2 x 13) nails, nail together while wet, thus helping to seal the join. Then adequately paint the woodwork.

3. When dry, place the Tempered Masonite lining into position, smooth side downwards (towards the bees). **Make sure the lids are square.** Nail into position.

4. Then place on the galvanised iron. One nail, 25 x 1.8 (1 x 15) in each corner through the folded-over edge of the metal into the lid rim will hold the metal on securely.

5. If you want to you can give the galvanised iron one or two coats of paint.

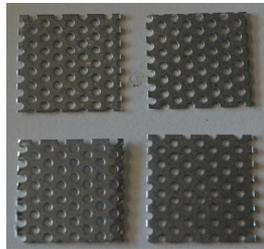

< Vent grids



^ When finished it should look like this ☺

\*\*\* Instructions reprinted from their "How To" pamphlet with acknowledgments and kind permission of John L Guilfoyle Pty Ltd. \*\*\*