



HOW TO ASSEMBLE SUPERS

1. Drill a 2mm (1/8 inch) hole in the top of the super ends that is in the thin part that has been rebated for the frames to sit on. (Some people drill all the holes before nailing.)

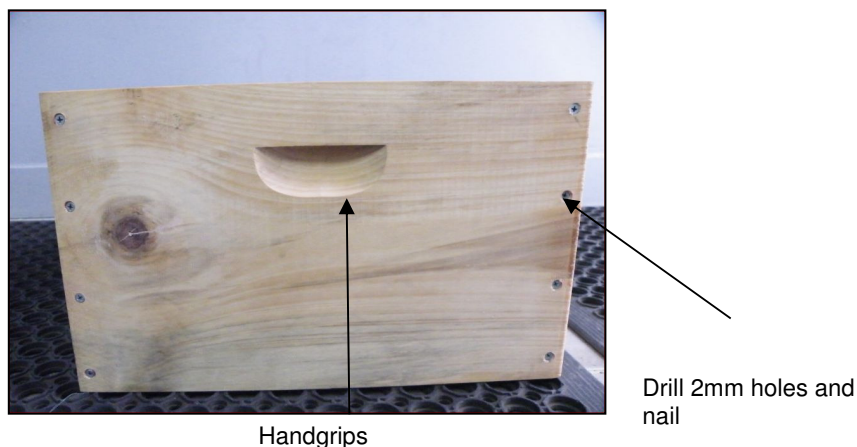

2. Using undercoat, paint the end grain areas and allow to dry.
3. Warning – Ensure that the two handgrips are on the outside and facing up the right way. (Although you really are not a beekeeper until you have put at least one box together with the handgrips wrong! 😊)
4. Using undercoat paint these same places a second time. While this undercoat is still wet, nail together using 65 x 2.8 (2 ½ x 12) nails. For rebated supers we recommend 7 nails for each corner joint. **Make sure it is square.** This is a messy job, but by doing it while the undercoat is wet, it helps to form the perfect weatherproof seal.
5. Paint box inside and outside with 2 coats of undercoat.
6. Give the inside 1 top coat and the outside 3 coats.

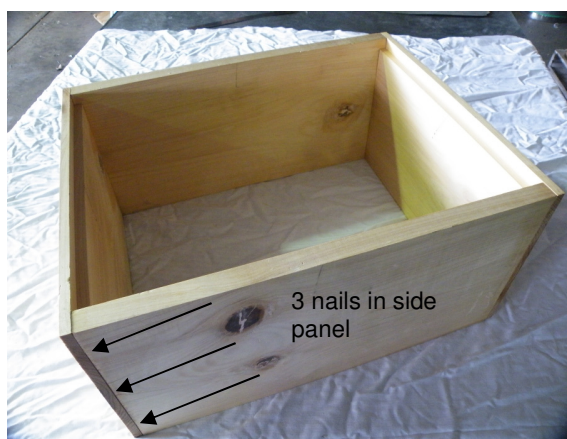

*** Instructions reprinted from their “How To” pamphlet with acknowledgments and kind permission of John L Guilfoyle Pty Ltd. ***